MX2201/MX2202 Mounting Boot (BOOT-MX2201-2202) Manual

HOBO Data Loggers

Installing the Logger in the Mounting Boot

1

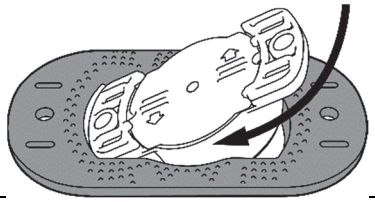

Holding both the boot and the logger upside down, insert the logger mounting tab into the boot as shown

2

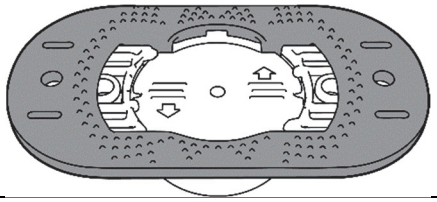

Insert the other logger mounting tab into the boot, making sure the logger is securely seated in the boot as shown

Mounting the Logger in the Boot to a Pipe

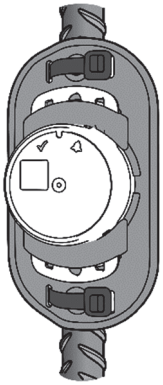

Use two of the included zip ties to mount the logger in the boot to a small pipe as shown

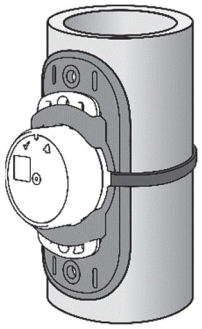

Use one of the included zip ties to mount the logger in the boot to a large pipe as shown

24847-B MAN-BOOT-MX2201-2202

Mounting the Logger in a Boot to a Flat Surface

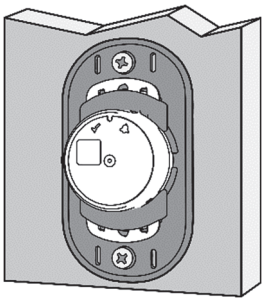

Use two #8 screws (not included) to mount the logger in the boot to a flat surface. Do not overtighten the screws.

For detailed mounting and deployment guidelines, refer to the logger manual at www.onsetcomp.com/resources/documentation/21536-mx2201-mx2202-manual or scan the code above.

ONSET U.S. and International Sales: 1-508-759-9500
www.onsetcomp.com/support/contact

© 2023 Onset Computer Corporation. All rights reserved. Onset and HOBO are registered trademarks of Onset Computer Corporation. All other trademarks are the property of their respective companies.